

Having problem with Worn Buttons in your Commodore Remote key?

Everlasting Silicone Replacement Buttons
from Western Australian manufacturer Polmex will fix it.

Order on line at www.polmex.com.au

Commodore
VR



Commodore
VR (with boot)



Commodore
VR



Commodore
VR, VS, HSV



Statesman, Ute, Caprice, Chev
Commodore VS, VT, VX, VY, VZ



Commodore
VS, VT, VX, VY, VZ



General Button Removal Procedure:

NO PROGRAMMING REQUIRED !

1. Remove old, worn through buttons accessing it from outside of remote **(DO NOT open remote!)**

Hardened, old rubber buttons can be warmed up/softened with hair dryer set on low heat. This will make rubber more pliable.

Old buttons can be removed in one of the following ways:

- by tearing out a hole in the middle of the button until most of the micro switch is exposed
- or cutting it out with scalpel, stanly knife or side cutter to uncover switch (be careful not to damage remote by cutting too much of the rubber)

2. Clean key shell from old rubber button remains.

The old buttons are connected inside with a flat piece of plastic, which doesn't have to be removed if glued. If it's loose, push it gently inside shell.

3. Press fit new silicone buttons right over bare switch. No gluing needed.

You may need small flat screwdriver to push buttons in.

If buttons don't fit properly, remove it, clean shell again and re-fit it.

4. Test your remote with the new buttons fitted in. Once button replacement is finished, remote works is ready to use.