

This procedure for *“Remote key Button Replacement for Mini Cooper, BMW.”* was prepared by Polmex – Western Australian manufacturer of Silicone Button Replacements for remote key controls of various car makes and models: Land Rover, Range Rover, Toyota, Mitsubishi, Kia, Holden, Commodore, Ford, Hyundai, BMW, ...and more

For Orders please visit us on line at www.polmex.com.au



If wing button in your remote is **mounted on rear plastic piece** as in this picture below:



and is not part of rubber overlay suitable for **cutting out** than it will be too narrow and will not fit.



Please note that our buttons will only suit your remote if top rubber layer is still well attached to plastic shell (as shown in our picture gallery). If top rubber layer in your remote is coming off plastic shell than our buttons will not fit well and fitting is not recommended.

You can use Stanley knife to cut out worn buttons smooth around the edges. Be careful not to cut too deep to avoid damaging plastic shell. It is better to leave slightly more of the soft rubber around edges than to cut out too much. You should end up with remote looking like the one on the left hand side ready for inserting new buttons in.




This repair set consists of 2 differently shaped buttons: lock and unlock.

We recommend press fitting of your new buttons from outside of remote matching buttons per function and cut out shape. It is possible to open remote and position buttons from inside of the shell but this is more complicated method.



Once your silicone buttons are fitted in remote will work straight away.

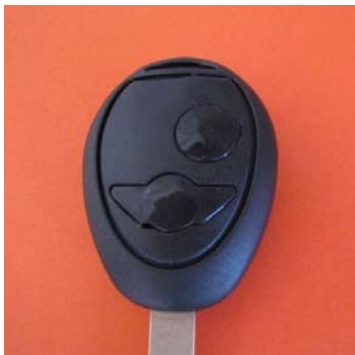

No reprogramming is need it.