

“Nissan Terrano, Micra, X-Trail, Pulsar, Primera ,Navara remote key - Worn out button replacement procedure”
prepared by Polmex , the West Australian innovative Engineering Company, specializing in design and manufacture of special purpose Silicone products. Supplying to the market Silicone Replacement Buttons for worn out remote keys of various car makes and models.

For Orders please visit us on line at www.polmex.com.au

In order to press-fit replacement pad in, old rubber buttons have to be removed to expose entire cut out in hard, plastic part. Please follow replacement procedure as below:



- ❑ Use small flat screw-driver to open remote key on the split line and to separate it into two parts




- ❑ Next separate button part of remote with flat screw driver on the split line.



DO NOT PULL it out by picking metal part of internals ! You may damage your remote.



Once remote is separated into single parts, you will take out old rubber buttons from buttons shell. Using the same flat screw-driver you will lift and remove old pieces of rubber from the shell.

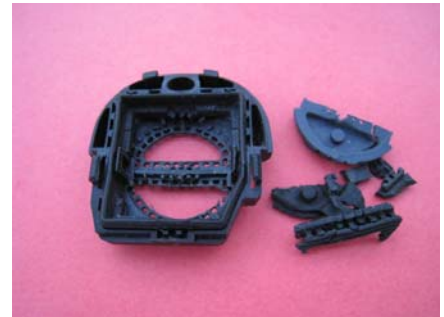

When old rubber button pieces are removed, your shell is ready for installing new Silicone Buttons.



Using your thumb nail, stretch pad sideways from inside of the cover, pushing in corners of the buttons first, till they “engage” with the shell. Once corners sit firmly inside the shell, you will next push remaining edges of the buttons in.





New Silicone Pad should tightly fit in buttons slot.

Once buttons fitted in, you have to put it back together in reverse order.



Your remote with new Silicone buttons is ready for use and no re-programming is needed.